



TOP FILL ULTRASONIC HUMIDIFIER US5003



USER MANUAL

THANK YOU FOR PURCHASING THE Top Fill Ultrasonic Humidifier BY ELECHOMES

Should you have any questions or concerns about your new product, feel free to contact us via support@elechomes.com. We hope you enjoy your new product!

Go green. Stay healthy. Count on Elechomes.

GET LATEST INFO & INSPIRATION

Find @Elechomes on social media for healthy lifestyle inspiration. Share your life with us.

@Elechomes


#Elechomeslifestyle • #Elechomeslifelover

TABLE OF CONTENTS

1. Product Diagram	1
2. Specifications.....	2
3. Safety Precautions	2
4. Operational Instruction.....	3
Operating Environment	3
How to Add Water	3
How to Use.....	4
5. Water Shortage.....	5
6. Maintenance.....	6
7. Important Notes	7
8. Troubleshooting	7
9. Warranty Information	9
10.Customer Support	10



Product Diagram

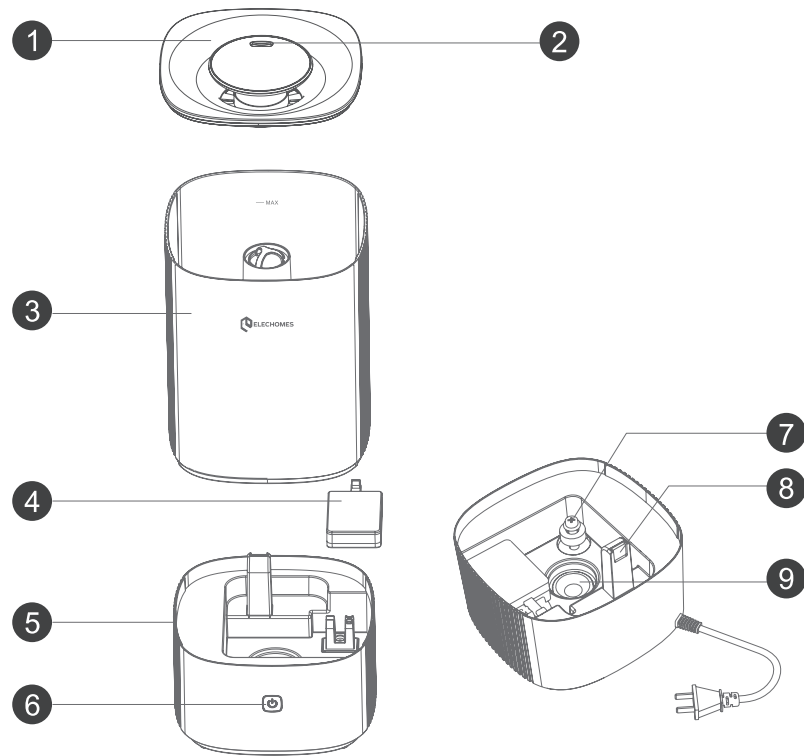

- ① Top Cover
- ② Mist Outlet
- ③ Water Tank
- ④ Float Valve
- ⑤ Base
- ⑥ ON/OFF button
- ⑦ Water level sensor
- ⑧ Air Outlet (With Fan Inside)
- ⑨ Atomizing Plate


Specifications

Product Name	Top Fill Ultrasonic Humidifier
Model	US5003
Capacity	5.0L/1.32gal
Voltage/Frequency	AC120V, 60Hz
Humidifying Capacity	100-300 ml/h
Operating Hours	16-55hours
Power(Max)	25W
Space Application	107-322 sq. ft ²
Made in China	

Safety Precautions

Failure to follow the instructions exactly as they are specified may result in fire, electric shock, and/or serious injuries.

- Only operate the device on a smooth and stable surface.
- Keep the device away from heat sources like radiators, ovens, and vents.
- Keep the mist away from furniture, appliances.
- Do not scratch the atomizing plate.
- Do not touch the water or internal elements while the device is working.
- Do not move the device while it is working.
- Do not cover the mist outlet.
- Do not attempt to repair the device. All repairs must be performed by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- ~~Do not let children operate the device without adult supervision.~~
- Turn off the device immediately if strange sounds or odors occur.
- ~~Drain the water tank and sink. Clean, wipe, and dry all parts, and then store them in the original packing box.~~

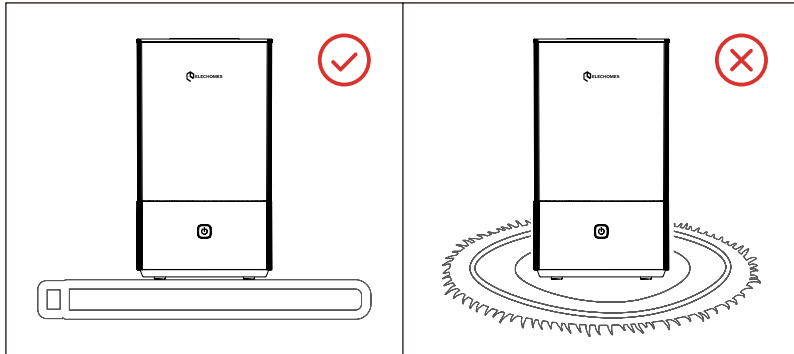

Note: Do not place the product on carpets or towels. Otherwise, the fan at the bottom of the base will intake the cotton fiber, causing damage to the machine and resulting in breakdown.




Operational Instruction

1. Operating Environment

- Only operate the humidifier in indoor environments between 41-113° F and lower than 80% relative humidity.
- Do not fill the tank with water hotter than 105°F.
- Filling the tank with purified water is recommended.


2. How to Add Water


1. Place the humidifier on a flat surface;
2. You have three ways to add water.

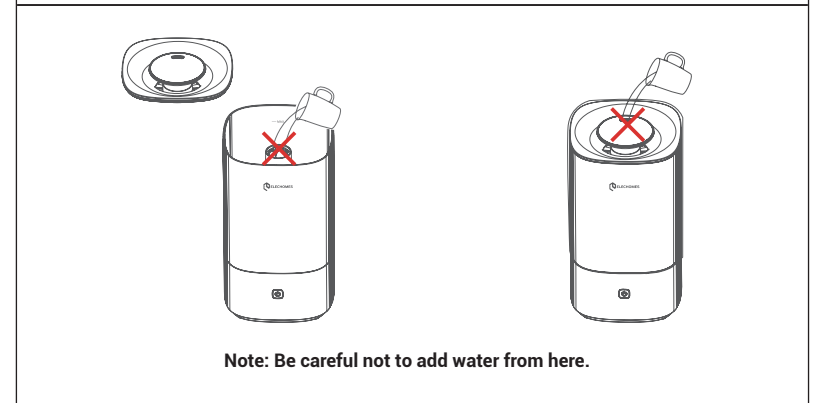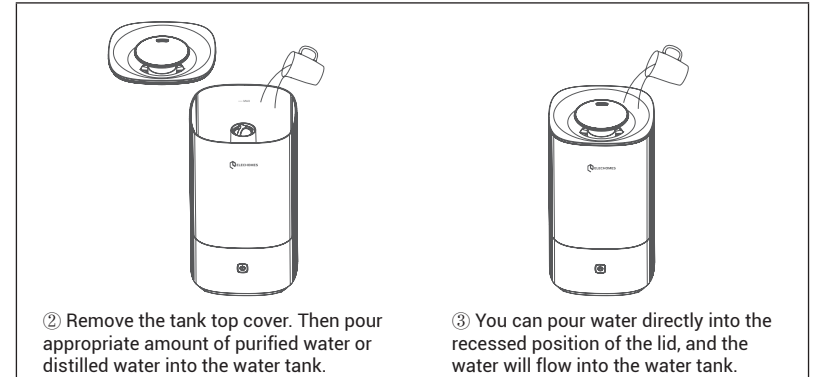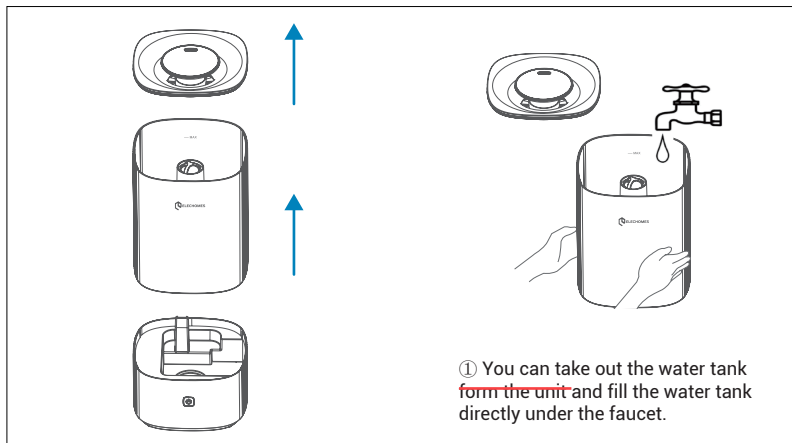

3. How to Use

Place unit on a flat, water-resistant surface as moisture may cause damage to carpets, finished floors, furniture, or walls.

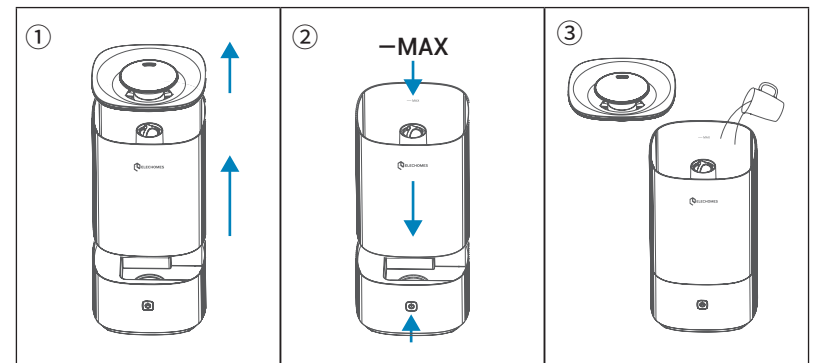

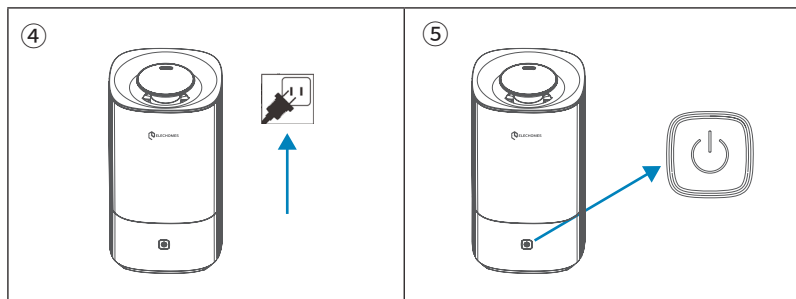

- ① Remove the Top Cover and the Water Tank Chamber from the Base. Remove ~~and discard~~ the protective foam on top of the Floater found inside the base.
- ② Replace the water tank onto the base by aligning the Elechomes LOGO with the ON/OFF button.
- ③ Fill the Water Tank Chamber with purified water or distilled water up to the Max Water Level Line. Do not overfill. **DO NOT ADD WATER TO THE BASE.**
- ④ Plug into an electrical wall outlet.
- ⑤ Mist Strength adjust

ON/OFF button	Mist strength	Indicator light
Press once	High	Blue
Press twice	Medium	Green
Press third time	Minimum	Orange
Press fourth time	Product turn off	

Note: If there is water around the machine during use, it means that the humidity in the room is too high. Please adjust to the appropriate mist strength.

4. Sleep mode

At any gear, long-press the on/off button for 3 seconds to enter the sleep mode. The indicator light will go off. The humidifier will continue to run in the original gear. Press ~~again~~ to exit the sleep mode.


Water Shortage

1. When the machine is working, if you take out the water tank, it will automatically stop spraying mist, and the indicator light will shine orange 10 times. After the water tank is put back, you need to press the on/off button to turn it on again.
2. When the water level is low, it will automatically stop spraying mist, and the indicator light will shine orange 10 times. After adding enough water to the water tank, you need to press the on/off button to turn it on again.

Note: Lifting the water tank may not automatically shut down the humidifier. Even though there is no water in the water tank, the machine is still spraying. Because the remaining water in the base sink is not below the lowest water level. We recommend turning off the machine before lifting the water tank to avoid spraying atomized water on the desktop.

Maintenance

1. Clean the water tank, water box, and atomizing plate once every two weeks. Make sure to unplug the device before cleaning.
2. Due to the higher water hardness in some areas, the surface of atomizing plate is prone to accumulate scale faster. Users should wash them regularly with detergent, and clean the inside of the water tank and the water box every week under the following instruction: Place 5 drops of dish soap on the surface of the atomizing plate. Pour in approximately 30ml of water. Use a dish brush or sponge to clean the atomizing plate, and water box until all lime-scale is removed. Drain the dirty water and rinse the device twice.

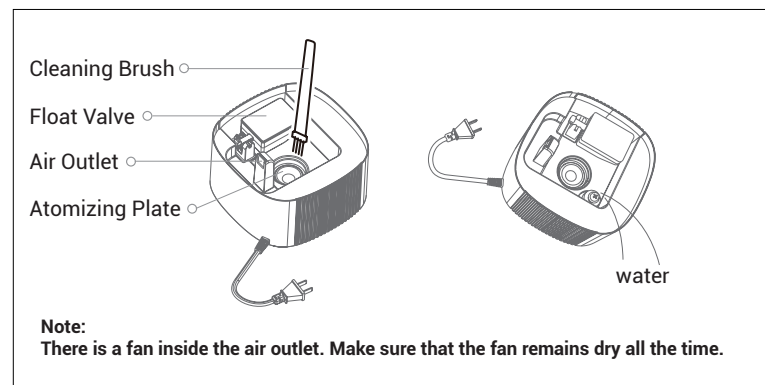

3. Do not immerse the water box, water tank in hot water while cleaning.
4. There is an air inlet at the bottom of the machine. When cleaning, do not immerse the bottom of the machine in water to avoid water entering into ~~the machine from~~ the air inlet and damaging the machine.
5. External cleaning of humidifier: wipe the exterior surface with a soft wet cloth (the water temperature should be below 104°F.)
6. Do not use hard cleaning tools or chemical detergents when cleaning to avoid damaging the parts.
7. Replace the water in the water tank on a regular basis to keep the product clean.
8. When the product is not in use for a long time, please pour out all the water and keep it dry.

Important Notes

1. Keep this unit out of reach of children and pets.
2. Do not put the product directly on the wooden floor to avoid dampness and causing deformation.
3. Please place the product 2 meters away from furniture and electrical appliances to avoid dampness.
4. When the room temperature is below ~~zero~~, please pour out the water in the water tank and water box to avoid the damage caused by ice.
5. Please don't put metal products, chemicals, or detergents into the water box, otherwise bad atomization will occur.
6. When pouring out the water in the water box, please turn off the power supply and unplug the power cord.
7. Never pour water into the mist nozzle and the air outlet.
8. When cleaning, make sure that water does not flow into the base.

Troubleshooting

Problem	Possible Cause	Solution
The device doesn't work or shuts down abnormally.	The device is not plugged.	Plug and start the device.
There is no wind and mist or the mist is small.	The device has not been plugged in.	Plug the cord into an outlet.
	The device has not been turned on.	Press the ON/OFF button to start the device.
	There is foreign matter on the atomizing plate.	Clear away the foreign matter.
	There is foreign matter on mist nozzle.	Clear away the foreign matter.
	The water level in the water box is too high.	Pour out the water and refill the water tank under the guide of the user manual.
	There is not enough water in the tank.	Pour more water to into the tank.
The mist has a strange smell.	The machine is brand new.	Remove the humidifier from the packaging and let it sit in a well-ventilated area for 12 hours.
	The water in the tank is dirty.	Empty the tank and pour in clean water into it.
The humidifier is making an odd noise.	There is not enough water in the tank.	Pour more water into the tank.
	The device has been placed on an uneven surface.	Operate the device on a level surface.
The ON/OFF indicator flashes in orange and the device cannot be turned on.	Insufficient water.	Fill more water into the water tank.
	The water level sensor gets stuck due to foreign matter.	Check whether there is foreign matter in the water box.
	The float valve gets stuck due to foreign matter.	
	The water tank is not installed correctly.	Reinstall the water tank.
The water tank is leaking.	The essential oil may erode the plastic.	Do not add essential oil into the water tank.

The mist leaves white marks on the furniture.	The hardness of the water is too high.	Fill distilled water or purified water into the water tank.
The mist wets the floor.	The humidifier is placed directly on the ground or on a low position, therefore the vapor does not have enough time to volatilize.	It's recommended to place the humidifier on a table or chair in a higher position to allow more time to volatilize in the air.
The humidifier stops working after cleaning.	The water may come into the air channel.	Follow the cleaning instructions in the user manual to prevent water from entering the air channel.

If your device does not work for some reason, please try to solve the issue yourself by unplugging the power cable and restarting the machine. If this doesn't work, please ask for Elechomes after-sale support.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty Information

Product Name	Top Fill Ultrasonic Humidifier
Model Name	US5003
Default Warranty Period	18 Months
For your own reference, we strongly recommend that you record your order number and date of purchase.	
Date of Purchase	
Order Number	

TERMS & POLICY

The Elechomes products are premium in material, craftsmanship, and service. They are effective from the date of purchase.

Elechomes will replace defective products based on eligibility. Refunds are available to the original purchasers of our products within the first 30 days of purchase. This warranty extends only to personal use instead of commercial, rental, or any other uses in which the product is not intended for. Each product has no other warranties other than the already provided warranties.

This warranty is non-transferable. Elechomes is not responsible for any damages, losses or inconveniences caused by equipment's failure, user's negligence, user's abuse, or improper operation that does not follow the included user manual.

This warranty does not apply to the following situations:

- Damage due to abuse, accident, alteration or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years old.

Elechomes and its subsidiaries are only responsible for damages caused by the intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the above disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

All expressed and implied warranties, including the warranty of merchantability, are limited to the period of the limited warranty.

Defective Products & Returns:

Should your product prove defective within the specified warranty period, please contact the Customer Support via support@elechomes.com with your invoice and order number. Once our Customer Support team has approved your request, please return the product with a copy of your invoice and order number.

Customer Support

Your satisfaction is our goal! Should you encounter any issues or have any questions about your new product, feel free to contact our Customer Support Team via support@elechomes.com.

* Please have your order invoice and order number ready before contacting Customer Support.



Note:

Filling the tank with hard water may cause limescale buildup over time. Only use genuine Elechomes Filter to minimize limescale. To purchase more filters for your humidifier, scan the QR code or go to elechomes.com for more information.



US Importer: Thousandshores Inc., 37707 Cherry St, Newark, CA 94560, USA
Customer Service: support@elechomes.com